

NISSAN Forklift Truck Fault Codes List DTC

F02 Battery voltage error

F57 Tilt backward solenoid error

F03 VCM communication error

F59 Tilt solenoid leak

F04 ECM communication error

F60 Attach-1A solenoid error

F05 DCM communication error

F62 Attach-1B solenoid error

F06 HST communication error

F64 Attach-1 solenoid leak

F07 MP communication error

F65 Attach-2A solenoid error

F08 TMS communication error

F67 Attach-2B solenoid error

F10 Lift lever neutral error

F69 Attach-2 solenoid leak

F11 Tilt lever neutral error

F70 Attach-3A solenoid error

F12 Attach-1 lever neutral error

F72 Attach-3B solenoid error

F13 Attach-2 lever neutral error

F74 Attach-3 solenoid leak

F14 Attach-3 lever neutral error

F75 Unload solenoid error

F16 Shift lever error

www.pdfmanual4trucks.com

F77 Lift lock solenoid error

F17 Speed error

F79 Unload solenoid leak

E29 Self shutdown system diagnostic result error signal

F20 Lift lever error

F80 Knob position solenoid error

F22 Tilt lever error

F82 Tilt lock solenoid error

F24 Attach-1 lever error

F84 Knob position solenoid leak

F26 Attach-2 lever error

F85 T/M forward solenoid error

F28 Attach-3 lever error

F87 T/M backward solenoid error

F30 Main oil pressure sensor error

F89 T/M solenoid leak

F32 Lift oil pressure sensor error

F34 Speed sensor error

F36 Tire angle sensor error

F38 Tilt angle sensor error

F40 Steering error

F50 Lift up solenoid error

F52 Lift down solenoid error

F54 Lift solenoid leak

F01 Memory check error

F55 Tilt forward solenoid error

www.pdfmanual4trucks.com

P03 VCM communication error

P04 ECM communication error

P05 DCM communication error

P06 HST communication error

P07 MP communication error

P08 TMS communication error

P22 Shift lever error signal

E03 VCM communication error

E04 ECM communication error

E05 DCM communication error

E06 HST communication error

E07 MP communication error

E08 TMS communication error

E21 Air flow meter error signal

E22 Water temperature sensor error signal

E23 Throttle sensor error signal

E24 Accelerator sensor error signal

E25 O2 sensor error signal

E26 O2 sensor heater error signal

E27 POS sensor error signal

E28 PHASE sensor error signal

E29 Self shutdown system diagnostic result error signal

E30 ECCS C/U error signal

E31 Electronic control throttle control error signal

E32 Overhear signal (STEP 1)

www.pdfmanual4trucks.com

E33 Overheat signal (STEP 2)

E34 Spark system error signal

E35 LPG F/INJ disconnection diagnostic result signal

E36 LPG fuel pressure sensor diagnostic result signal

E38 LPG vaporizer diagnostic result signal

E39 Mast-high SW diagnostic result signal

E40 Oil pressure sensor diagnostic result signal

E41 Stop lamp SW error signal